

User Manual



Bierley

BM-01 Big Key GSM

User Manual for BM-01

1	For your safety	5
2	Specifications	6
3	Phone layout and keypad	7
	3.1 Layout	7
	3.2 Keypad	8
4	Icons	9
5	Before use	10
	5.1 Battery and SIM card	10
	5.2 Charging	11
6	Basic operation	11
	6.1 Turn your device On / Off	11
	6.2 Making a call	11
7	Menu tree	14
8	Phonebook	15
	8.1 Browse	15
	8.2 Create	15
	8.3 Storage status	15
	8.4 Abbreviated dial – Speed dial	15
	8.5 Enable FDN	16
	8.6 Copy	16
	8.7 Delete all entries	16
	8.8 SDN phonebook	16
9	Calls	16
	9.1 Calls	16
	9.2 Call duration	16
10	Text message	17
	10.1 Read a message	17
	10.2 Write a message	17

10.3 Outbox	17
10.4 Draftbox	17
10.5 Voice mail	18
10.6 Message setup	18
10.7 Delete all	18
11 Alarm	18
12 Profiles	19
13 Calculator	19
14 FM radio	19
15 Settings	20
15.1 Phone	20
15.1.1 Display	20
15.1.2 Clock	20
15.1.3 Own number	20
15.1.4 Keylock	20
15.1.5 Factory default	20
15.1.6 Torch / Flashlight setting	21
15. 2 Emergency call setting	21
15. 3 Call	21
15. 4 Network	21
15.4.1 Call waiting	21
15.4.2 Call forwarding	21
15.4.3 Restrict calls	22
15.4.4 Network select mode	22
15.4.5 SIM tools	22
15. 5 Security	22
16 Input method	23
17 Appendix	23
17.1 Battery safety	23
17.2 Use, safety, cleaning and maintenance	24
17.3 Trouble shooting	26
CE Declaration of Conformity	27

E&OE

Due to possible revisions, updates or amendments a newer version of this instruction manual may be available on our web site.

A simplified version is available on our web site only.

Large Print Manual available for download.

www.bierley.com

1 For Your Safety

Please read these safety guidelines before using your mobile phone.

Vehicles

While driving, obey local laws and regulations with regard to mobile phone use. Under very rare circumstances, using the mobile phone in certain vehicles may negatively effect the vehicle's electronic equipment. If the vehicle in which you are traveling is equipped with an airbag, do not place your phone on top of or within the contact area of the airbag in order to avoid potential serious injury or death in the event of airbag inflation.

Airlines

Turn off your mobile phone when advised by a member of the crew.

Chemicals

Turn off your mobile phone before entering areas with volatile fuels or chemicals.

Hospitals

Turn off your mobile phone in hospitals, especially near electronic medical instruments. Radio wave interference may cause a malfunction of such electronic equipment.

Interference

Do not use your mobile phone near low signal or precision electronic equipment. Radio wave interference may cause a malfunction of such electronic equipment.

Repair

Do not attempt to open the main housing or perform any repairs to your mobile phone. There are no user serviceable parts inside and the phone should be sent to an authorized repair facility.

Battery and Accessories

In order to prevent damage to your mobile phone, only use a genuine Bierley battery or charger. The use of other batteries or

chargers could result in battery leakage, overheating, cracking, fire or other malfunctions.

Use

Avoid subjecting your mobile phone to high temperatures (over 60°C) such as in direct sunlight, high humidity or dusty environments. Do not use alcohol, thinner, benzene or other solvents for cleaning. Only use a soft, dry cloth or anti-static cloth to clean the mobile phone and charger.

Disposal

Dispose of old batteries, charger and phone only in accordance with local law.

 
2 Specifications

Function	Description	Remarks
Dimensions	4.2 x 2.2 x 0.6 inches	
Display	1.8 inches FTN 128 x 64 pixels	
Weight	70g	Without battery
SIM Card	3V small card	*
Phonebook Capacity	100 in phone + SIM capacity	*
Frequency	GSM 900/1800 (UK EU model) 850/1900 (US model)	*
Vibrate, Backlight, Ring Tone	Supported	
Call Divert, Barring	Supported	*
Call Waiting	Supported	*
Alarm	Supported	
Phonebook	Supported	*
Auto Redial	Supported	*
Speed Dial	8 speed dial, keys 2 ~ 9	
Standby Time	100-140 hours depending on network	
Talk Time	120-180 minutes depending on network	
Languages	English	
Voltage Rating	5V	
Current Rating	700mAh	
Charger Rating	100-240V, 50/60 Hz, 150 mAh	
Maximum Charging Voltage	4.2V	
Standard Li-ion Voltage	3.7V	
Normal Li-ion Current	140mAh	
Standard Li-ion Capacity	700mAh	

Note: * indicates phone support, subject to network or SIM support.

3 Phone Layout and Keypad

3.1 Layout

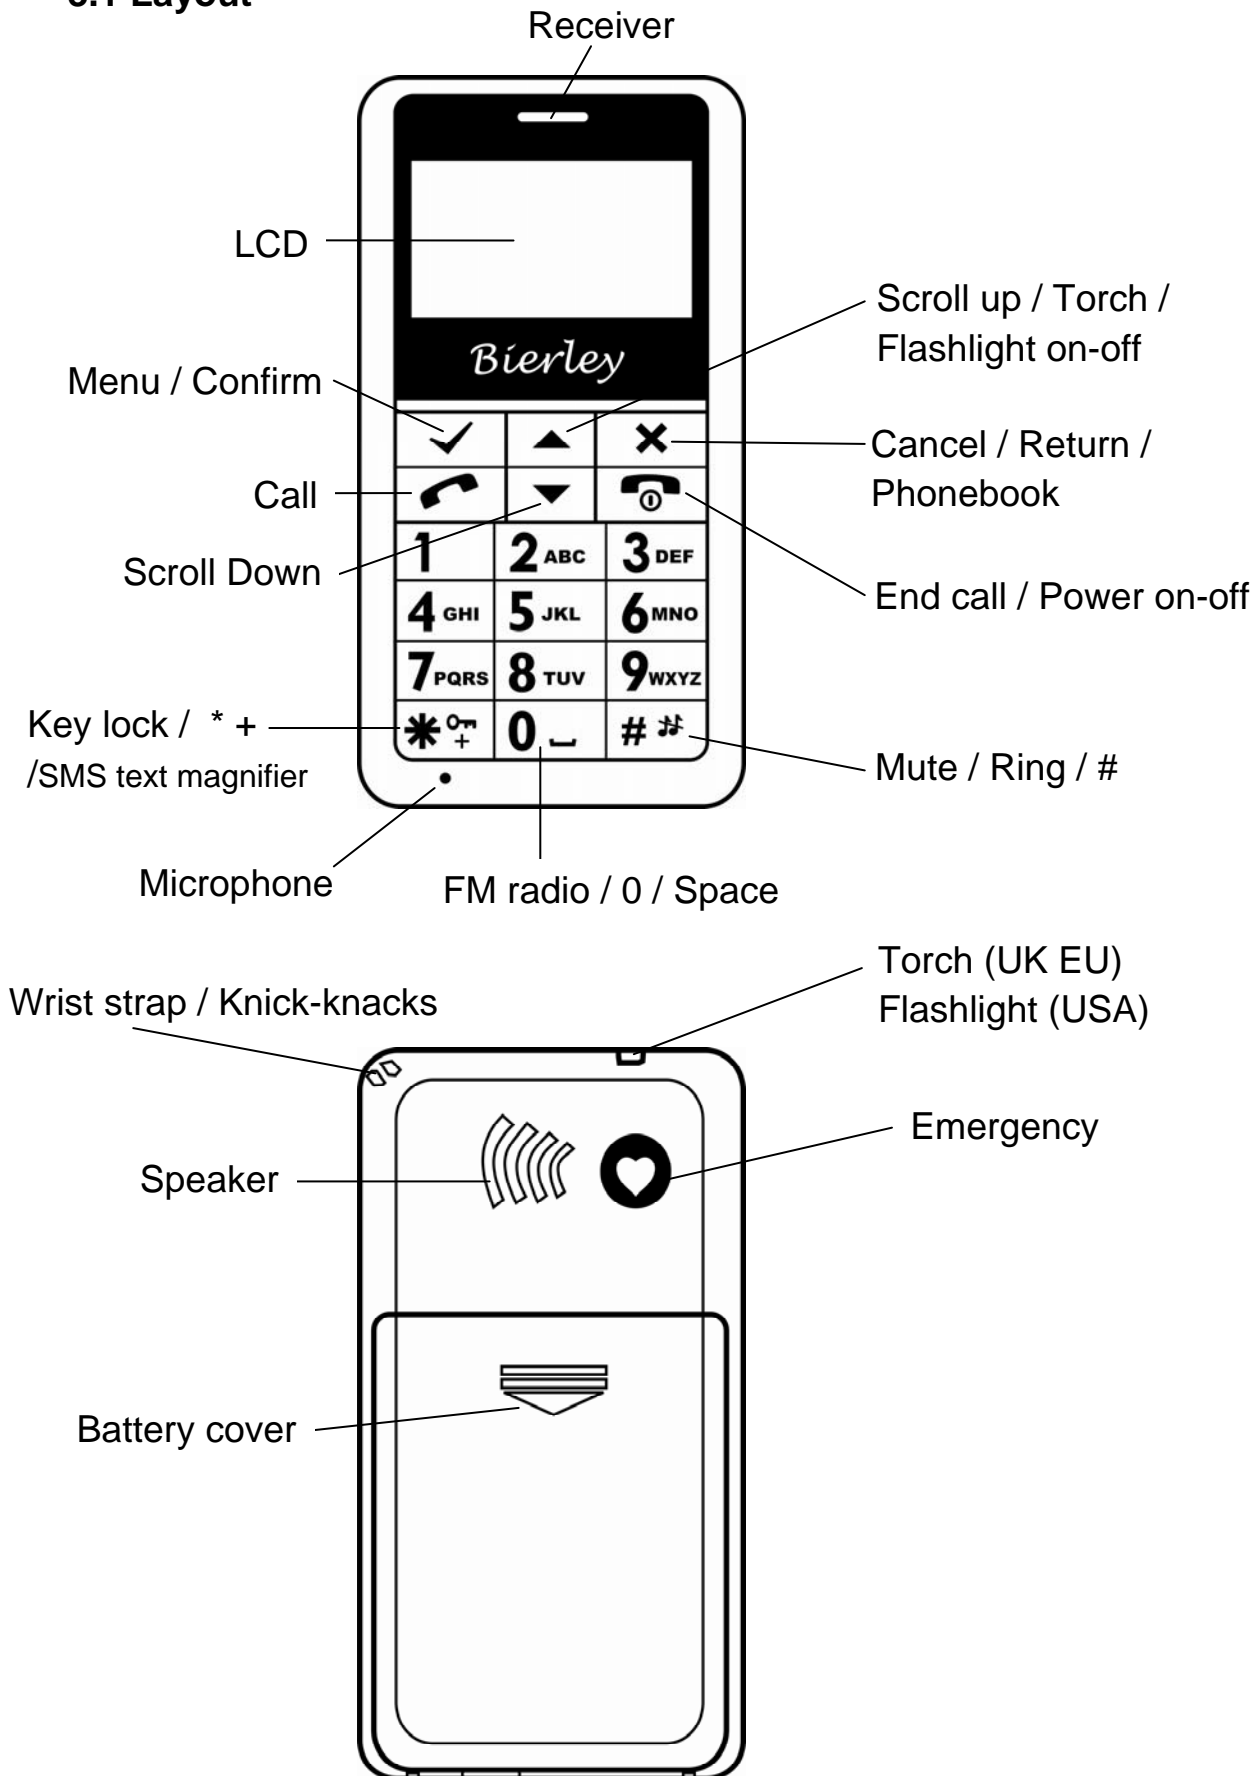

3.2 Keypad

Left / Right Soft Key: ✓ ✕

- The Left / Right soft keys carry out the function indicated at the bottom of the screen.
- In Standby Mode, press ✓ to enter the **main menu** press ✕* to enter **phonebook**.



Call Key:

- 1) Initiate dial after entering a number manually or from the phonebook.
- 2) Answer a call.
- 3) In standby mode, display call lists.



End Key:

- 1) End or reject a call.
- 2) Return to standby mode.
- 3) Press and hold for 3 seconds to turn the phone on / off.

Navigation Key and Function Key:

▲/▼ Key:

- 1) Move cursor up / down and select settings or options.
- 2) Turn the volume up / down for the FM Radio in FM Radio Menu or ring tones in Profiles Menu.
- 3) Turn the volume up / down when talking on the phone.

Emergency Key:


- 1) First pre-set your chosen emergency number, a relative for example.
- 2) When the Emergency Key is pressed the phone will call automatically.

Number Keys:





 







- 1) 0~9 alphanumerical entry keys.
- 2) Press and hold "0" key to turn on FM Radio. Repeat to turn Radio off. (Must have Hands Free activated in FM Radio Menu)












3) * and # multi function keys:

- e.g. Press * two times for the international dial + symbol
- e.g. Press and hold # key to activate Mute/Vibrate Mode. Repeat to activate ring mode

Note: * The “X” appears as a Save  Icon for saving contact info in the Phonebook “Create” sub-menu.


4 Icons

	Speaker on
	Speaker off
	Dialed or Outgoing call list
	Incoming call list
	Missed call list
	Recent missed call
	Recent missed SMS
	Call forward
	Line 2
	FM auto search
	FM manual search
	Save

	Signal strength
	Battery level
	FM radio
	Roaming
	Headset
	Alarm clock is active
	Vibration only mode
	Vibrate and ring mode
	Ring only mode
	Ring off
	Mute
	Menu
	Phonebook

5 Before Use

 5.1 Battery and SIM Card

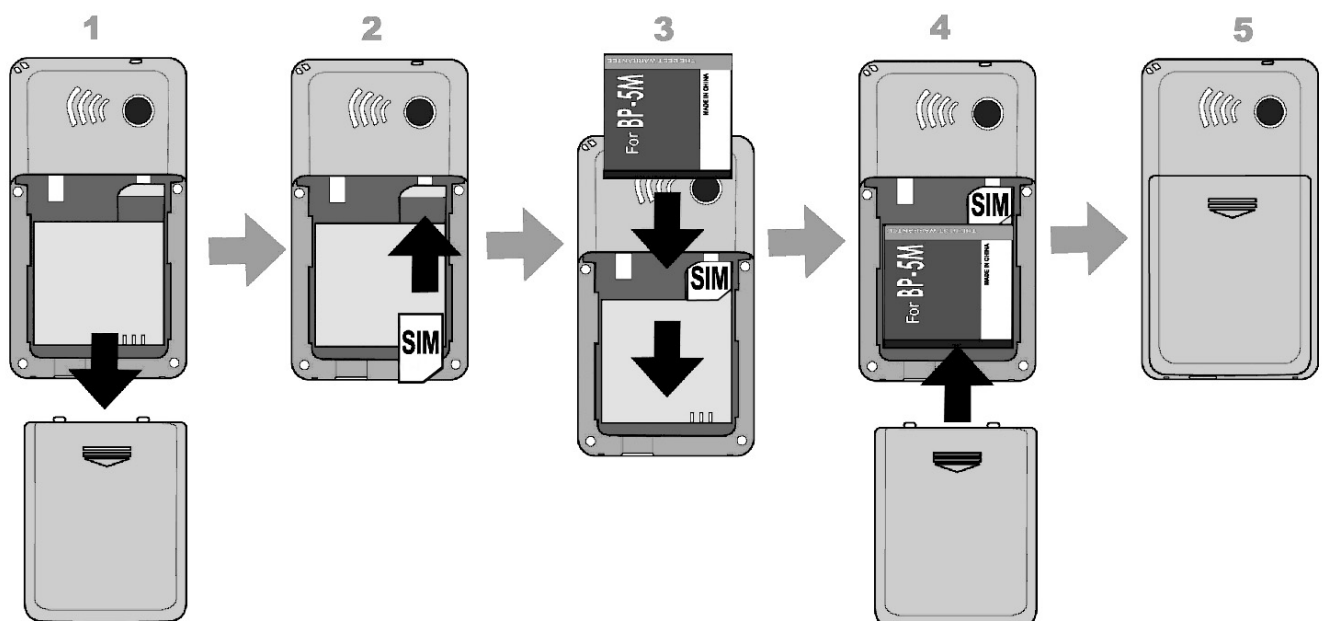

Insert SIM Card:

- 1) Ensure phone is switched off.
- 2) Slide the battery cover off and remove battery if present.
- 3) Insert SIM card, contacts facing down, fully into card slot. Replace battery and cover.

Insert Battery:

- 1) Slide the battery cover off.
- 2) Insert the battery, contacts facing down, fully into the battery bay.
- 3) Replace the battery cover.

5.2 Charging:

Always use the charge cradle and never attempt to connect the charge cord directly to the handset. To setup the charge cradle ready for use.

- 1) First plug the charger into a working wall outlet (100v – 240v).
- 2) Connect the micro USB charger plug to the back of the charge cradle then stand the mobile phone on the charge cradle and charging will start automatically. The power supply and cradle should be left connected. There is no need to switch them off or disconnect them at any time.

Note It is very important to not force the connector. If it doesn't connect smoothly and easily, something is wrong. Check orientation and angle of insertion. The plug should be inserted square to the socket.

6 Basic Operation

6.1 Turn Your Device On / Off

Press and hold  for about 3 seconds to turn the phone on / off.

If you turn the phone on without inserting a SIM card, the phone will indicate "No SIM Card".

After a SIM is inserted, the phone will check automatically whether the card can be used or not.

The display will then show the following indication if the SIM can be used:



Enter Password - If you have set Phone Lock. Default is 0000.

Enter PIN - If you have set SIM Lock. If you do not know the PIN, contact your service provider.

6.2 Making a Call

When a network operator's name appears on the display, you can dial a number. The signal strength indicator on the top left corner will show the signal strength. (Five bars being the strongest signal).

Domestic Calls

Use the key pad to enter a telephone number, use the ✕ key to delete any errors, and then press Call . To cancel or end the call, press .


International Calls

When making international calls you can press the * key two times to enter the international phone prefix “+”. Then enter the country code, area code and phone number that you wish to reach. When making international calls, you should omit the initial 0 of area codes.

Example: + country code area code telephone number Call  Key


Dialing From Call Records

All the calls you dial, receive or miss on your phone are saved in the call records. Once the storage capacity is reached, the oldest records will automatically be erased to make space for new records (30 Max).

On standby, press the Call Key  to see recent numbers, scroll to the number you wish to call and press the call key again to dial.

Alternatively, scroll to the number that you want, then press the ✓ key to perform one of the following: Details, Call, Edit, Send message, Delete, Save, or Show.


Calling From The Phonebook

Press ✕ to access the phonebook, then scroll to the contact that you wish to call. Press the Call Key  to complete the action.

Emergency Calls


If you are located within a network area (you can see this by referring to the signal strength indicator) you should be able to make emergency calls. If your network operator does not provide roaming where you are, **Emergency only** will appear on the screen. If you are located within a network area, even if you do not have a SIM card, you will be able to transmit emergency calls. However, you will need the operator's support to use this function and it will not work in all countries or on all networks.

In Standby Mode:

Press and hold the **Emergency Key** for 3 seconds. The phone will count down the delay time so that you can cancel the call if you wish to by pressing the End Key . The phone will then dial out. If the number is busy it will try again automatically and will switch to the next emergency number if one has been preset.




All emergency calls are handled on speaker mode. To return to normal mode, press ✓ then “Speaker off”.

In Power Off Mode:

Press and hold the **Emergency Key** for 3 seconds. The phone will automatically power on and count down the delay time so that you can cancel the call if you wish to by pressing the End Key . The phone will then dial out. If the number is busy it will try again automatically and will switch to the next emergency number if one has been preset.

All emergency calls are handled on speaker mode. To return to normal mode, press ✓ then “Speaker off”.

Receiving Calls

 
You can answer a call by pressing the Call Key  or you can set the phone to allow answering by pressing any key * except the End Key , the Right Soft Key , or the Emergency Key.

* To set any key answer: press ✓, ▼ to settings, press ✓, ▼ to call, press ✓, ▼ to any key answer press ✓, press ✓ again to enable.

Changing Settings While Calling:

When there's an incoming call, you can press the ▼ **key** to cancel the ringing or vibration and press up or down keys to set the volume after call is answered.

7 Menu Tree

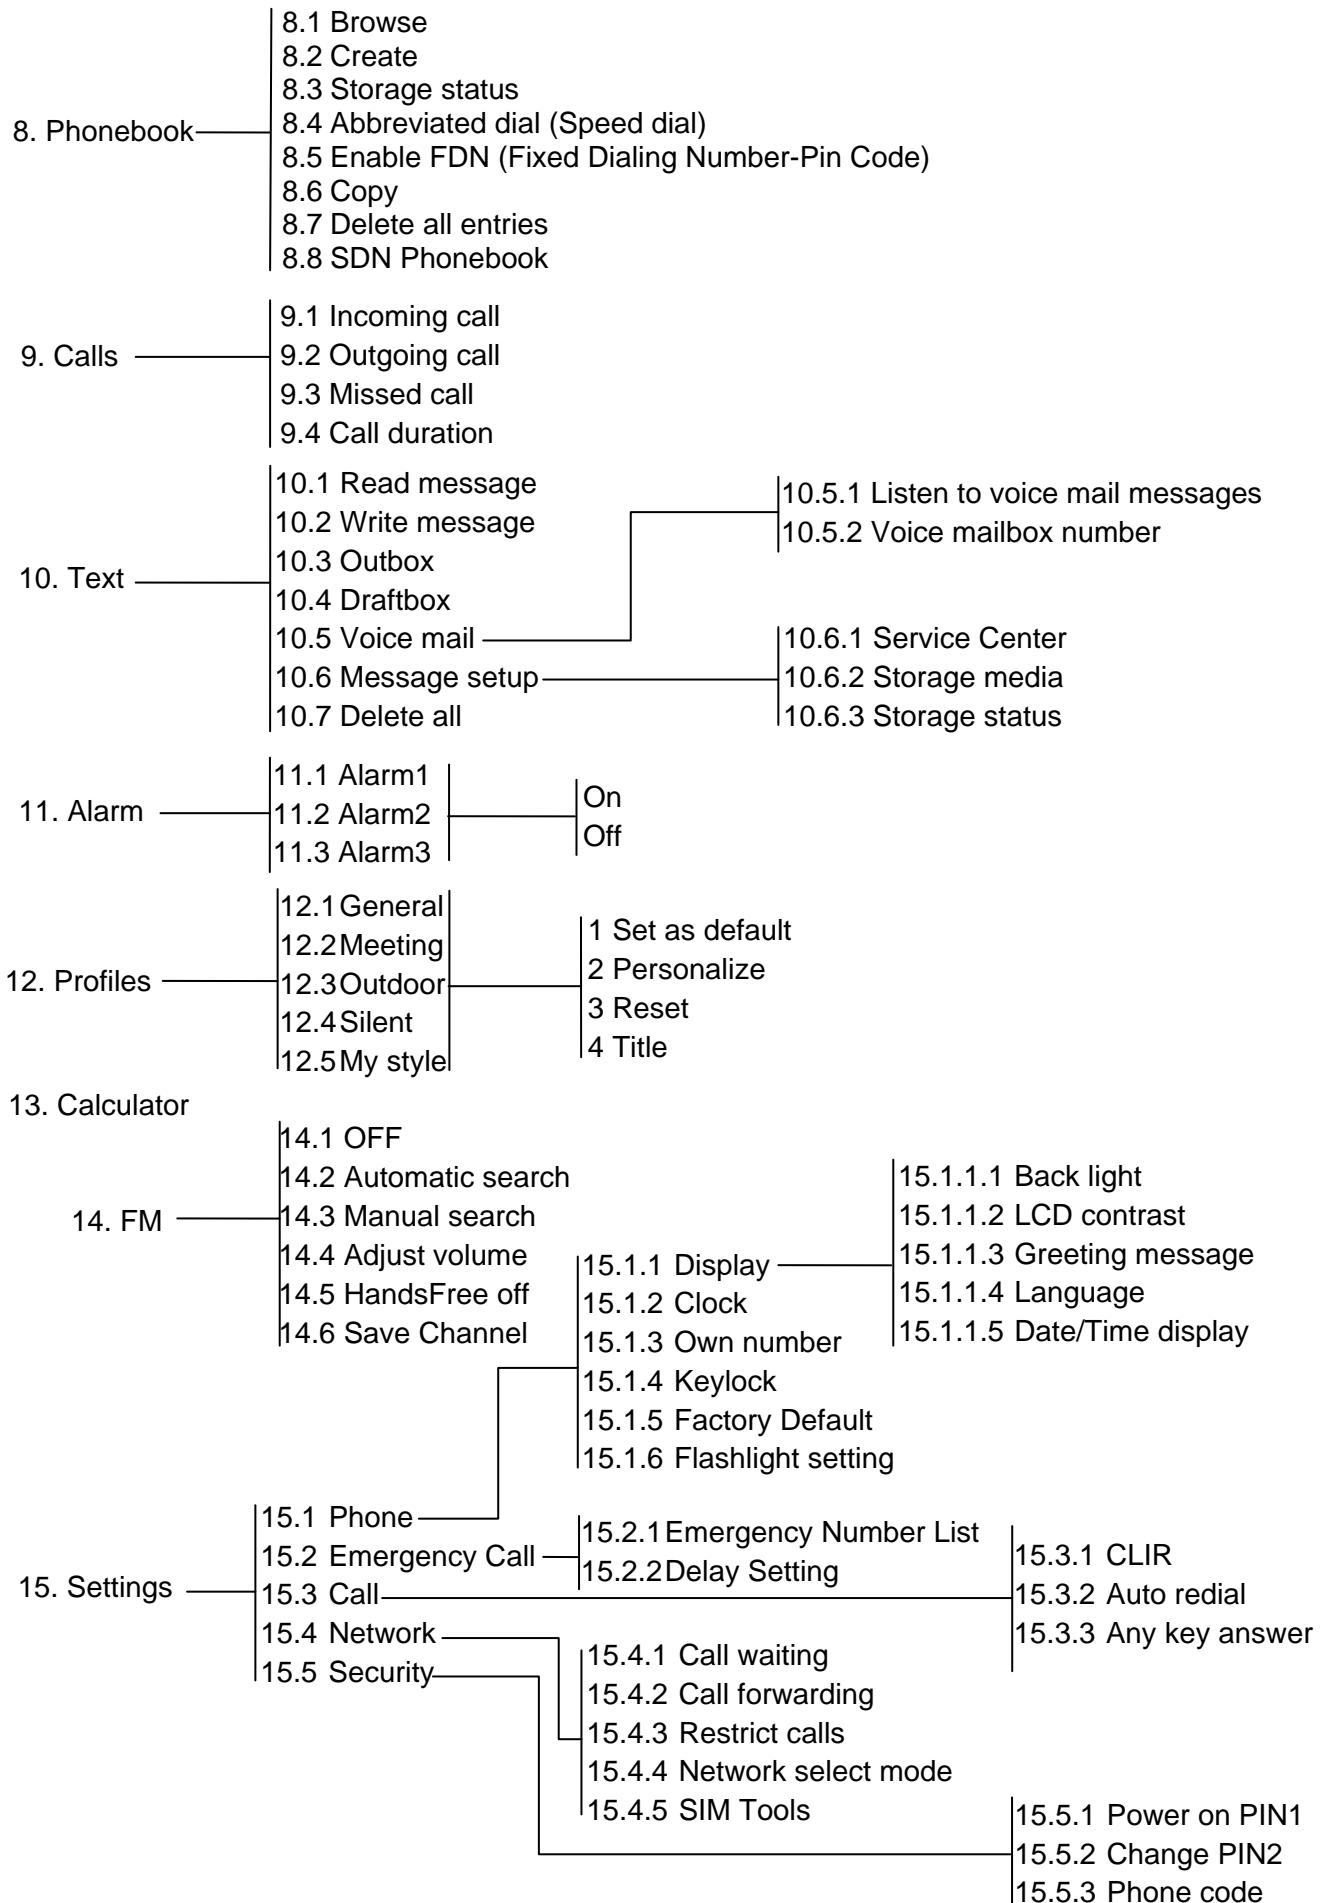

8 Phonebook

Note: The phone can store up to 100 entries. Your SIM card may be able to store more. For quick access to the Phonebook, press ✕

For Phonebook Menu press ✓ then press ✓ again to enter the Phonebook.

Here you will see:

- | | |
|-----------------------------|---|
| 8.1 Browse | Browse the phonebook. |
| 8.2 Create | Add a new entry to the Phonebook or SIM card. |
| 8.3 Storage status | Shows the storage status of both the phone and SIM card. |
| 8.4 Abbreviated dial | Speed dial - Single key dial for pre-programmed numbers stored on your phone. |

There are two steps. First add a phone number to the contacts and then allocate a speed dial number as follows:

To add contacts in the phone, turn on the phone and press the green check. Go to the phonebook option by pressing the green check again. Scroll down and enter the “create” section by pressing the green check. Press the green check and enter the name. After entering the name, press the green check again. After the name is complete, scroll down and press the green check to enter the number. After completion, press the red cross to exit.

To enter a speed dial number, from the home screen, press the green check, and then press it again to enter the phone book. Scroll down and enter the “abbreviated dial” section by pressing the green check. Select a number from 2 to 8 (number 1 is voicemail.) Click the green check, click the check again and scroll down to the number that you want to set, click the green check one more time to set it. Once you are finished, press the red cross to exit.

Finally, to call the speed dial number, for example if you set “Friend” to be speed dial “2”, from the home screen press “2” and the green call button and “Friend” will automatically be dialed. It means speed dials are always only 2 clicks (select and call).

Tip, if you are only setting one speed dial, consider using number “5” because it is easier to identify the center of the keypad and it has a tactile dot. A small tactile identifier is often especially helpful for persons with low vision.


- | | |
|-------------------------------|--|
| 8.5 Enable FDN | Fixed Dialing Number-Pin Code. |
| 8.6 Copy | Copy from SIM to phone or phone to SIM. |
| 8.7 Delete all entries | Delete all entries from SIM, phone or both. |
| 8.8 SDN phonebook | Dial pre-programmed numbers stored on your SIM card. |

9 Calls

9.1 Calls

The phone keeps lists of the numbers you recently received or dialed, even if the calls did not connect. Ten of each **Missed**, **Dialed** and **Received calls** are retained and sorted from newest to oldest. The oldest entries are deleted as new ones are added. Each entry tells you the person’s number (or name, if available), date and time. You can call, store, or delete the numbers on these lists.

To make a call from a recent Calls list


Press ✓ to enter the main menu, scroll to **Calls** and press ✓ again to enter the Calls sub menu. Scroll to the menu that you want and press ✓ again. Scroll to the number that you wish to call and press the Call Key  to dial.

Alternatively, scroll to the number that you want, then press the ✓ key to perform one of the following: Details, Call, Edit, Send message, Delete, Save, Delete all or Show.

9.2 Call Duration

Call duration can be seen in option 4 of the Calls menu.

10 Text Messages

You can send and receive SMS (short message service) text messages. If there is a new SMS, the  icon will appear at the top of the screen. If the inbox is full, the icon will flash and you should delete some of your messages to make space for new ones.

10.1 Read a message

Press **✓**, scroll down to Text message, press **✓**, press **✓** again and select the message you wish to read. Press **✓** to open the message and press ***** key if you wish to magnify the text for easier reading. To Reply, Forward, Edit, Dial back, Extract number, or Delete press **✓** and choose the action you wish to perform. To exit, press **✕**

Reply	Text message back.
Forward	Forward the current message.
Edit	Edit the message.
Dial back	Call the number.
Extract number	Save Contact Info and add to Phonebook.
Delete	Delete the message.

10.2 Write a message

Use the alphanumeric keypad (2~9) and the space bar (0) for creating a text message. You can then send or save it. When sending, a copy can be saved to the Outbox if desired.


10.3 Outbox

Access the Outbox to view messages that you saved in the SIM or phone. You can press **▲ / ▼ Key** to scroll through messages, press **✓** to read the details, and then press **Option** to access the following:

Delete	Delete the message.
Forward	Forward the current message.
Edit	Edit the message.

10.4 Draft box

The Draft box is used to save unfinished SMS which can be revised and sent later. Press **✓** to access the Draft box submenu and the phone will

show any stored draft SMS. Scroll up or down to view a message and press “✓” or  key to do the following:

- Delete** Delete the message.
- Forward** Forward the current message.
- Edit** Edit the message.

10.5 Voice Mail

You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network, not on your phone. Contact your service provider for more details. Store your voicemail number in your phone to make it faster and easier to use voicemail. Your voicemail number is provided by your service provider.

10.6 Message Setup

Before using SMS, you must enter certain settings as provided by your service provider:

Service Center Edit and save the SMS center number (this number can be obtained from the network operator). Messages can then be sent successfully.

Storage media Your preference of storing on the SIM or phone can be selected.

Storage status Displays the memory status of the SIM card and phone.

10.7 Delete All

You can delete all or any of the SMS in the **inbox**, **outbox** and **draftbox**.

11 Alarm

You can set up to three individual alarms and they will activate one time or repeatedly as desired.


Note: If an alarm is set, it will activate even when the phone is switched off. Keep this in mind when traveling on an aircraft and disable alarms before your flight.

12 Profiles

Your phone rings or vibrates to notify you of an incoming call, message or other event. This ring or vibration is called an alert. Your phone has the following user definable profiles:

General	Available for general use.
Meeting	Can be set for silent use, e.g. Vibration alert only.
Outdoor	For outdoor activities where you may require a high volume ringing alert.
Silent	Alerts, key operation etc. may be set with no sound.
My style	You can set your own profile including your name or an ID of your choice.

13 Calculator

Your mobile phone provides a calculator with basic functions to facilitate simple calculations. Use the keys from **0** to **9** to enter numbers, the **# key** to enter a decimal point and **▲ / ▼ key** or *** key** to change the mathematical operators **+**, **-**, **x**, **÷** then press **✓** to confirm the action followed by the next number. By pressing **✕** you can delete the last entry or result. Press  to exit the calculator.

14 FM Radio

The integrated FM radio plays via the speaker on the back of the phone. Press **✓ key**, enter the FM Radio **sub-menu**:

Turn OFF	When the channel is displayed, Press ✓ twice to turn OFF.
Automatic search	Scroll to Automatic search or press key 2, then press ✓ . The display will show "A" . Use the up or down keys to jump to the next channel.
Manual search	Scroll to Manual search or press key 3, then press ✓ . The display will show "M" . Use the up or down keys to change frequency.
Adjust Volume	Scroll to Adjust volume or press key 4, then press ✓ . Use the up or down keys to change the volume, then press ✕ .
HandsFree	Choose Handsfree to activate shortcut to turn on FM Radio utilizing "0" key. If Handsfree off is

selected, the "0" key is not activated to turn on FM Radio.

Save Channel

Scroll to Save Channel or press key 6, then press ✓. A location for the specific channel can be set by allocating a key (1~9).

15 Settings

Here you can adjust various settings, including: **Phone, Emergency Call Setting, Calls, Network** and **Security**.

15.1 Phone

15.1.1 Display

Backlight	Choose: Always on, 15 seconds or 30 seconds automatic off.
LCD contrast	Adjust the screen contrast.
Greeting message	Set and display your own greeting message.
Language	Change the language used on your phone.
Date/Time display	Enable or disable the time display on the main screen.

15.1.2 Clock

Date & Time Settings	Input the current time and date.
Date display format	Set your preferred date format.
Date separator	Set your preferred date separator format.
Time display format	Set your preferred format of 12 or 24 hour clock.

15.1.3 Own number

Enter your own phone number here.

15.1.4 Keylock

The keylock prevents accidental activation of keys or accidental calling when the phone is pressed, for example, in a pocket or bag. Options include, **Disable, 30 seconds, 60 seconds** auto-lock. After setting the lock feature, you will need to press ✓ **key** and * **key** to unlock the key pad.

15.1.5 Factory Default

To return the phone to the original factory settings enter the password **0000**, power off and then power on again.

15.1.6 Flashlight setting

A torch or flashlight is featured on the top of phone. Do not look directly into the light when it is switched on. Setting options include, **15 seconds on, Always on, Always off**. To turn the light on or off at any time, press the **▲ key** and hold for 3 seconds.


15. 2 Emergency Call Setting

Emergency Number First input your emergency number(s) in the main phonebook then select one and allocate it to emergency 1 via the **Settings Emergency** menu. You may enter up to 3 individual numbers.

Delay Setting

This option allows a 3, 5 or 8 second delay to help avoid accidentally dialing emergency numbers. During the delay period the call may be canceled. If no action is taken the number will be automatically dialed.

15. 3 Call

- CLIR** Calling Line Identification Restriction (Phone Number Blocking)
- Auto redial** Select **ON** for auto redial of a busy number.
- Any key answer** Select to allow any key to be pressed to answer an incoming call excluding the End Key  , the Right Soft key **✕** and **Emergency Key**.
- Line Select** Subject to your service provider's support.

15. 4 Network

15.4.1 Call Waiting

If you subscribe to Call Waiting, an alert tone sounds while you are on a call to indicate that you have received a second call.

- Interrogate** Query Status of this function
- Activate** Activate the mode
- Deactivate** Deactivate the mode

15.4.2 Call Forwarding

Call Divert A network service which allows call diversion handling, subject to your service provider's support.

15.4.3 Restrict Calls

In the "Restrict calls" sub-menu, you can set various call barring combinations for increased phone security subject to your service provider's support. In the event of someone else obtaining access to your mobile phone, for example by stealing it, they would be unable to make outgoing calls without a password, except for emergency numbers. Contact your service provider for details.

All Outgoing Calls	Interrogate all outgoing calls, Activate or Deactivate.
All Int'l call	Restrict dialing international numbers.
Int'l except to home	Restrict dialing international numbers except your home number.
All incoming calls	Restrict all the incoming calls.
Inc' while roaming	Restrict incoming calls while roaming.

15.4.4 Network Select Mode

Automatic	Automatically select the service operator according to SIM information.
Manual	Select a network service manually.

15.4.5 SIM Tools

May be supported by your service provider.

15.5 Security

You can set security options for the phone and SIM card.

Power on PIN1	A PIN1 code can protect your SIM card and prevent it from being used.
On	If the PIN1 code is set off, select on. Input the correct PIN1 code and the function will be enabled. Next time you power on the phone, you will need to input the correct PIN1 code.
Off	If the PIN1 code is set on, select off. Input the correct PIN1 code and the feature will be deactivated.

- Change PIN1** If you want to change the PIN1 code, Select Change PIN1, then input the current PIN1 code. The phone will prompt for a new PIN1 code two times.
- Note:** If you input a wrong PIN1 code three times in succession the SIM card will be locked. You will then need a PUK code to unlock the SIM card. The PUK code is normally provided with the SIM card. If you do not have the PUK code, contact your service provider.
- Change PIN2** Input the current PIN2 code and you can then set a new PIN2 code.
- Phone Code** Your phone may be locked for additional security. The default phone lock code, which can be changed, is **0000**.

16 Input method

Alphanumeric input and a large selection of characters is achieved by directly pressing various keys either single or multiple times.

- 1~9** Numbers 1~9, A~Z, a~z, various other characters
- 0** Space or 0 (zero)
- * key** Various symbols
- # key** Switch between upper case, lower case and numbers
- ▲ key** Cursor left and move up the page
- ▼ key** Cursor right and move down the page
- 📞 End Key** Cancel and return to main standby screen

17 Appendix

17.1 Battery Safety

- Do not disassemble or modify the battery, it may leak, overheat, crack or catch fire.
- Only dispose of batteries in accordance with local law.
- Do not subject the battery to extreme high temperature such as a fire, it might explode.
- Do not subject the battery to high temperature such as direct sunlight, it

may lead to premature deterioration, weakening of the battery case, leak or fire.

- When installing the battery do not use excessive force, it could break the battery case, cause a leak, overheat or catch fire.
- Do not allow any metal to contact or short circuit the battery, it may overheat or catch fire.
- If any defect with the battery is seen or suspected, immediately disconnect any charger and remove the battery to a safe location. Do not allow the battery terminals to contact metal objects.
- Avoid getting the battery wet.

17.2 Use, Safety, Cleaning and Maintenance

- Keep the mobile phone in a safe or secure location and away from children.
- Only use original Bierley branded or supplied accessories, chargers and batteries. The use of other batteries or chargers could result in battery leakage, overheating, cracking, fire or cause other malfunctions.
- Do not use your mobile phone near low signal or precision electronic equipment such pacemakers and other electronic medical equipment, smoke detectors, automatic doors and other automatic control installations.
- This mobile phone is equipped with an auto power on function. Please refer to the mobile phone's clock setting to ensure that the mobile phone will not automatically turn on during a flight onboard a commercial airliner.
- Avoid impact or shock to your mobile phone. Especially, do not drop it onto a hard surface.
- Avoid areas with volatile or flammable gases, fuels or chemicals.
- Avoid areas of very extra humidity, such as a steam sauna, and avoid dusty environments.

- Do not use your mobile phone in a bath, shower or while swimming. Water ingress may cause a malfunction and will void any product warranty.
- Do not disassemble or modify the mobile phone.
- Avoid impact, especially to the LCD screen.
- Above all, use common sense to avoid damage and risk of danger.
- To clean, use a soft, dry cloth. Do not use solvents, thinners or other harsh chemicals.

17.3 Trouble Shooting

If anything unusual occurs while using your mobile phone, please refer to the following table.

Problem	Possible Cause	Solution
Weak Signal	Weak service coverage by provider or in a remote area with low signal strength	Move to a location with a stronger signal
Echo	Bad network relay	Hang up and try redial
Standby time too short	Standby time can be significantly reduced when searching for a signal	Turn off the phone when in an area with a weak signal
	Battery not fully charged, old or defective	Use a new or fully charged battery
Won't switch on	The battery is not charged	Use a new or fully charged battery
SIM card error	SIM card is damaged	Contact your service provider
	SIM is installed incorrectly	Check and install correctly
Failure to connect to the network	Invalid SIM card	Contact your service provider
	Outside of GSM coverage area	Move to a location with coverage
	Weak signal	Move to a location with a stronger signal
Cannot call	Call divert, barring function enabled	Disable call divert, barring function
Wrong PIN	Three consecutive attempts to enter PIN using a wrong number	Contact your service provider
Cannot add to phonebook	Phonebook memory is full	Delete some records
Cannot set some functions	Not available from your service provider under your current agreement	Contact your current service provider or check with other service providers
Battery will not charge	Battery or charger is damaged	Purchase a replacement
	Charging in a very low or very high temperature environment.	Charge in an environment ideally between 10 and 55 degrees C.

IMPORTANT NOTE:

CE Declaration of Conformity

The following equipment, BM-01 Big Key GSM phone, is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility:

(2004/108/EC), Low-voltage Directive (2006/95/EC) and the Amendment Directive (93/68/EEC).

The equipment was passed under the procedures given in European Council Directive 99/5/EC and 2004/108/EC.

The tests were performed according to the following European standards:

CE 0678

EN 301 511 V9.0.2

EN 301 489-1 V1.8.1, EN 301 489-7 V1.3.1

EN 50360:2001, EN 62209-1:2006

EN60950-1:2006+A11:2009

Changes or modifications to this unit could void the user's authority to operate the equipment.

The equipment complies with CE RF radiation exposure (SAR) limits set forth for an uncontrolled environment.

The device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Manual Reference: BM-01 rev 1.9